




Front view

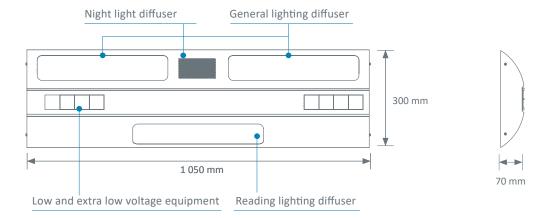

Colours

	White RAL 9016		
AVOLYS	•		

Ergonomics

AVOLYS satisfies the lighting and electrical distribution needs of normal care rooms. It can incorporate up to eight electrical accessories.

The wall-mounted lighting unit also impact resistance rating (IKO8), providing maximum safety to patients and healthcare professionals working in a secure environment (nursing home, Alzheimer units, specialist hospitals, prisons, and psychiatric departments).



2 www.tlv.fr

CONTROLLED LIGHTING

The AVOLYS wall lamp can be equipped with LED source. The ALVOLYS wall lighting unit provides comfortable, high-quality lighting for patients and care teams.

High-performance and controlled lighting


The high-performance reflectors in the general lighting and reading light units offer high efficiency and direct the light towards the middle of the room and onto the reading surface.

Comfortable lighting:

General and reading lightings are less likely to dazzle the patient, medical personnel, or visitors, because the sources are not directly visible.


General lighting

- PMMA * diffuser
- MIRO 20 SILVER® Aluminum reflector




Reading lighting

- PMMA diffuser
- MIRO 20 SILVER® Aluminum reflector

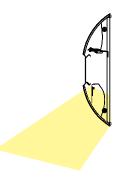

Caring lighting

Caring lighting combines direct (reading) and indirect (general) lighting.

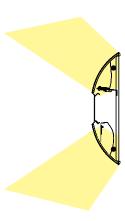


3 www.tlv.fr


^{*} PMMA: Polymethyl methacrylate

EFFICIENT LIGHTING

Lighting study

- Standard room
- Dimensions of the room: 3 m x 3 m, ceiling clearance 2.5 m
- Reflection coefficients: ceiling 7, walls 5, and floor 3
- Coefficient of depreciation 0.83

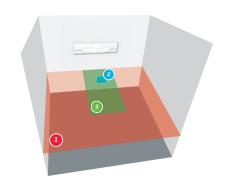

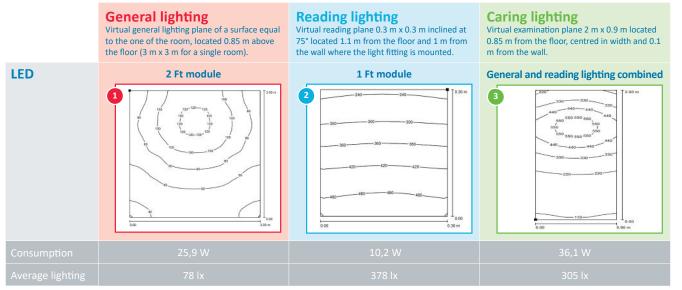

Lighting power

Lighting	Modules power	Colour temperature	Luminous Flux	Consumption	System Efficiency	Driver(s)	Efficiency energy class ICR 80	Efficiency energy class ICR 90
General lighting	24,2 W (2 Ft)	3000 K 4000 K	3867 lm	27,8 W	139,1 lm/W	Fixed / DALI	A C	A G D
Reading lighting	8,4 W (1 Ft)	3000 K 4000 K	1421 lm	10 W	142,1 lm/W	Fixed / DALI	A C	A D
Night light	2,1 W	3000 K	313 lm	3,5 W	89,4 lm/W	Fixed / DALI		A D G

• Luminous flux maintenance factor: L80B10 to 60 000 hours


• MacAdam Ellipse: 3 SDCM

• LED sources photobiological risk : GP1

Luminaire output flux = (Module flux) x (optical efficiency), the optical efficiency of the luminaire is indicated in the Eulumdat file (LDT line 23) available for download on our website or on request.

4 www.tlv.fr

⁽¹⁾ All the luminous flux indicated in the brochure are based on the flux of the LED modules also known as system flux.

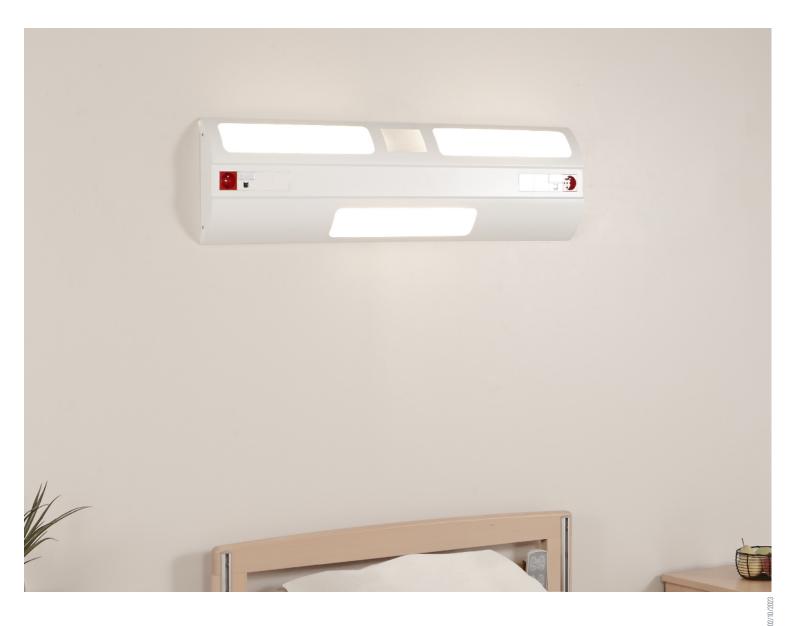

Norms & certifications

- Low Voltage Directive (LVD) 2014/35/UE
- Directive 2014/30/UE : Electromagnetic Compatibility (EMC)
- EN 60598: Luminaires Part 1: General requirements and tests Part 2-25: Luminaires for use in clinical areas of hospitals and health care buildings
- European rules for caring centers lighting

Bed head units, Wall lighting units, Ceiling pendants, Suspended Beams & Columns, Special care bed head units, Sealed lightings, Medical gas monitoring & Biomedical Accessories



